



In the following circumstances, press reset for more than 3 seconds and wait for the camera to sound "Didi", namely the reset, the camera will be unbound

- The camera prompts for "Wireless Password error."
- Changed the account number or password of the wireless router
- Wireless router was replaced with the previous camera connection